


Kit upgrade moving body support (BR21199)


Kit includes :





- 1) **Remove** the body.
- 2) **Remove** the back silent-block.

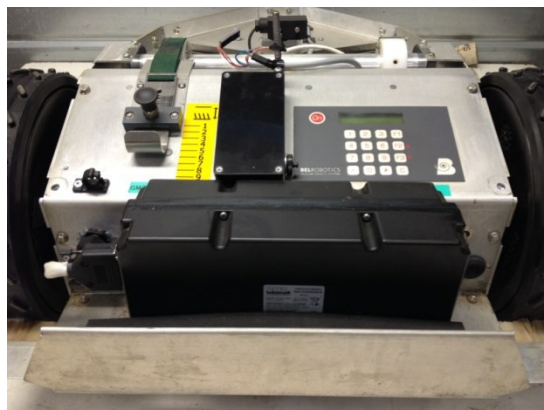



3) **Remove** the wheels engine.

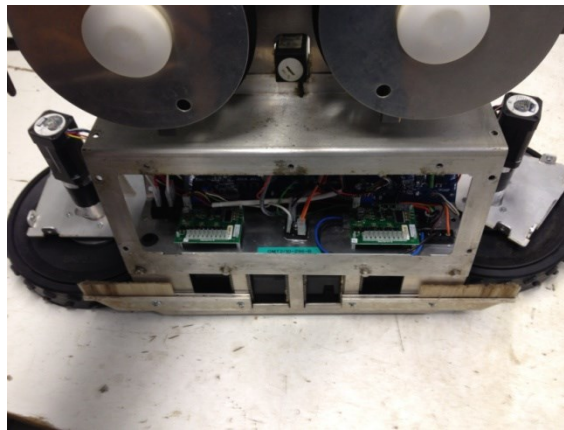

4) **Drill** a 5.2mm whole as indicated on picture on each side of the robot.

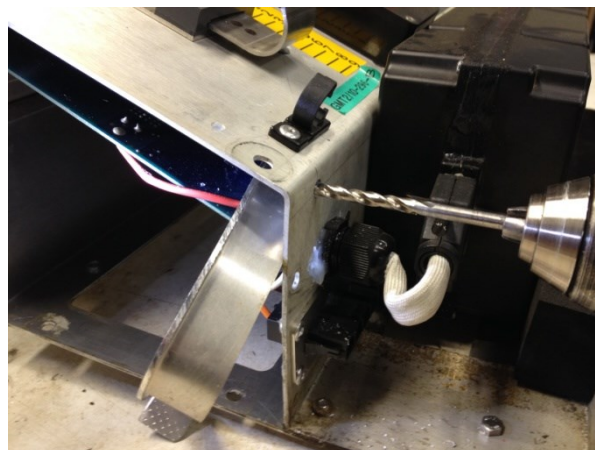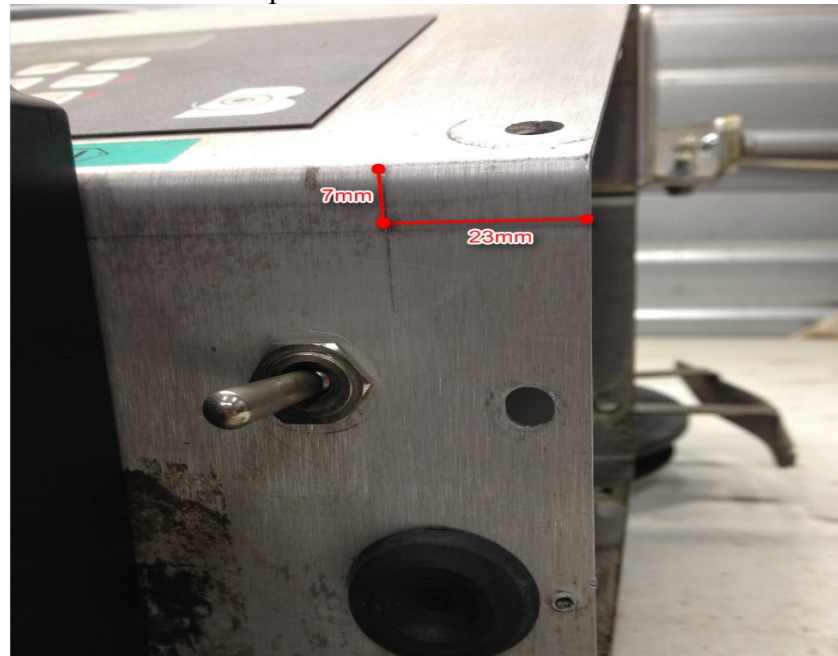

5) **Place** the magnetic cables.

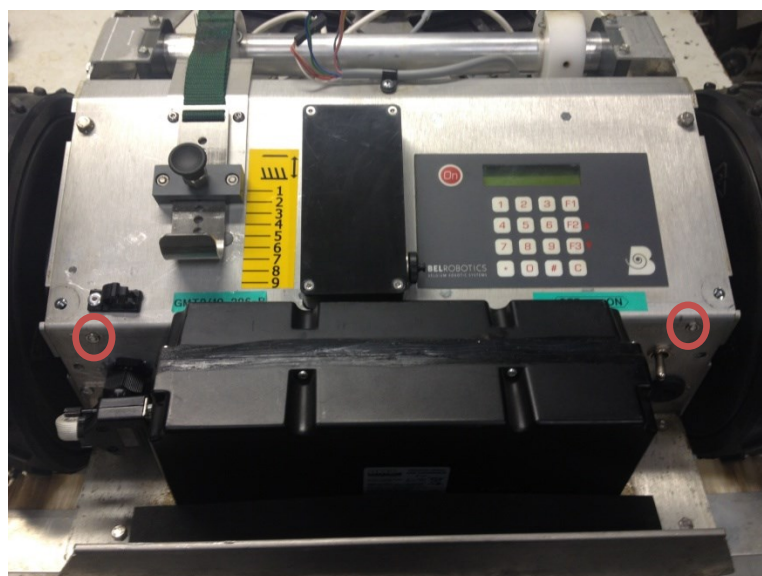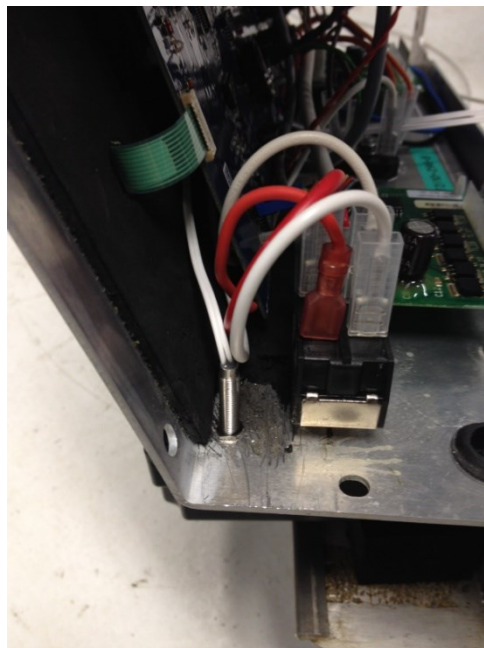


Rédaction : Nicolas Clausse

Approbation :

Upgrade capteur de recul

6) Connect the magnetic sensors.

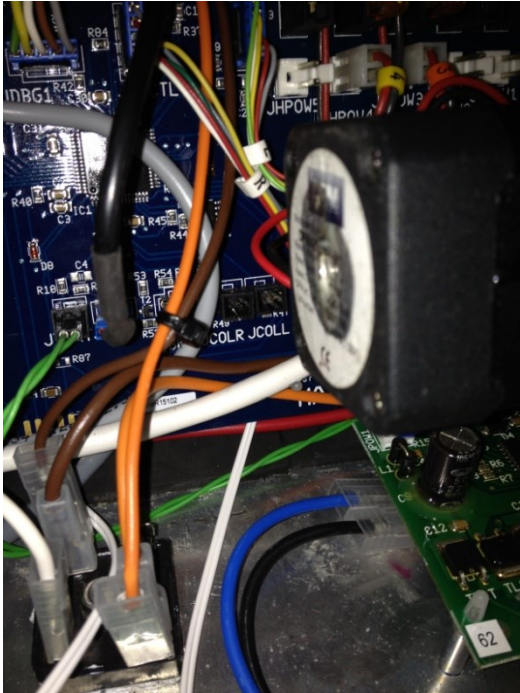

7) Re-install the wheel engines and close the trap.

8) Install the moving body sensors using the supplied screws.

**Be careful, sensor left and right are different from each other.
Magnet must be inward.**



9) Update the software using a CDLR version.

Rédaction : Laurent Burnier

Approbation :